

A tenant's guide to

Electric Showers – Mira Zest

Quick-start guide



Stop – Turn to stop rather than using the pull cord or isolator switch to stop the water flow.

Low – For a cold shower.

Medium - For a warm shower during the warmer/summer months.

High – For a warm shower in the winter/colder months



Adjust the water temperature by turning the control as necessary. Be careful when altering the temperature.

Seasonal changes

The temperature of the cold mains water supply is generally colder during the winter months. This means the temperature dial may need to be set higher (or the “High” setting selected) in winter to meet the temperature you want.

Cleaning the shower

Always isolate the power to the shower before cleaning. The showerhead and hose should be kept clean and free from blockage to ensure the shower works correctly. To clean it use a soft cloth to wipe away any limescale from the nozzles on the headset. Please be careful as many household cleaning product can damage plastics.

IMPORTANT - Please be aware that it is important not to carry out any unauthorised alterations to shower units. This includes replacing the head and hose sets. This will void the warranty and may cause the shower to fail.