


A tenant's guide to Worcester 28si

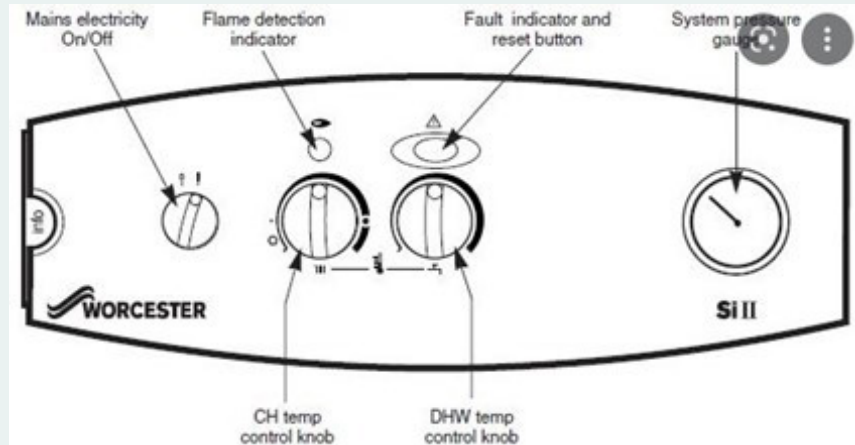

If your boiler has low water pressure, your needle on the right-hand side (see picture 1 and 2) will usually be at 0 or below 1, and the fault indication button will be flashing red.

If this is the case, reinstating the boiler to its correct pressure is simple. Underneath or sometimes above your boiler you will find a filling loop connected to the pipework (pictured below). Turn the black lever carefully so that it is in line with the pipework. You will start to hear water re-entering the boiler, at this point keep an eye on the pressure gauge needle (in picture 1 and 2) and turn the lever back to its original position when it reaches 1.5.



When the water is back to the correct level on the pressure gauge you may sometimes be required to reset the boiler. This involves holding the reset button central to the boiler for five seconds and then release. Your boiler should then be up and running.

If you experience the fault light flashing it could be due to low pressure, a gas fault or something else. Always check your gas meter first. Instructions for this are in the gas meter section of the booklet.

Following a repressure or reset of the meter, hold in the flashing reset button for five to 10 seconds and release and the boiler should fire back up.